



PHLS LOCKING BRACKET INSTALL GUIDE



STEP 1: Remove the old bracket w/
the Security Star Tool.

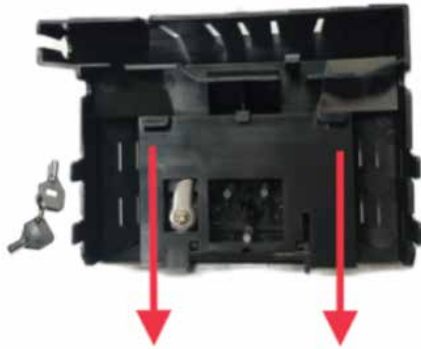

STEP 2: Unlock using key & slide
inner plate down to prepare bracket.

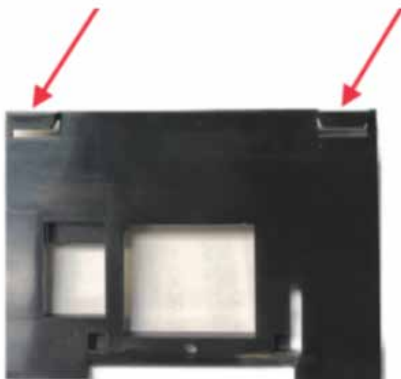

STEP 3: Match the teeth on top of
the plate to slots on top of the camera.



STEP 4: Use the provided new
screw to lock the plate in place;
Beneath the triangle icon button.



STEP 5: Make sure the hotspot
dongle is in the slot then put on cover.



STEP 6: Once lens is adjusted properly
Slide the cover down to engage lens
locking teeth. Use key to lock cover.